

# 管桩机程序说明

一，功能号说明：共 **A,B,C,D,E** 五个模式运行。**AF1** 指 **A** 模式频率 1 段；**AT1** 指 **A** 模式频率 1 段运行时间，其他依次类推；**F0.001=5** 闭环 **PLC-T** 运行模式；**F5-25** 设为 **3** 时，为管桩机使能；出厂时为三线式启停运行方式

F7.005=AF1; F7.006 =AT1; F7.007=AF2; F7.008=AT2; F7.009=AF3; F7.010=AT3; F7.011=AF4; F7.012=AT4;  
 F7.013=BF1; F7.014=BT1; F7.015=BF2; F7.016=BT2; F7.017=BF3; F7.018=BT3; F7.019=BF4; F7.020=BT4;  
 F7.021=CF1; F7.022=CT1; F7.023=CF2; F7.024=CT2; F7.025=CF3; F7.026=CT3; F7.027=CF4; F7.028=CT4;  
 F7.029=DF1; F7.030=DT1; F7.031=DF2; F7.032=DT2; F7.033=DF3; F7.034=DT3; F7.035=DF4; F7.036=DT4  
 F7.037=EF1; F7.038=ET1; F7.039=EF2; F7.040=ET2; F7.041=EF3; F7.042=ET3; F7.043=EF4; F7.044=ET4

## 二，接线图

